

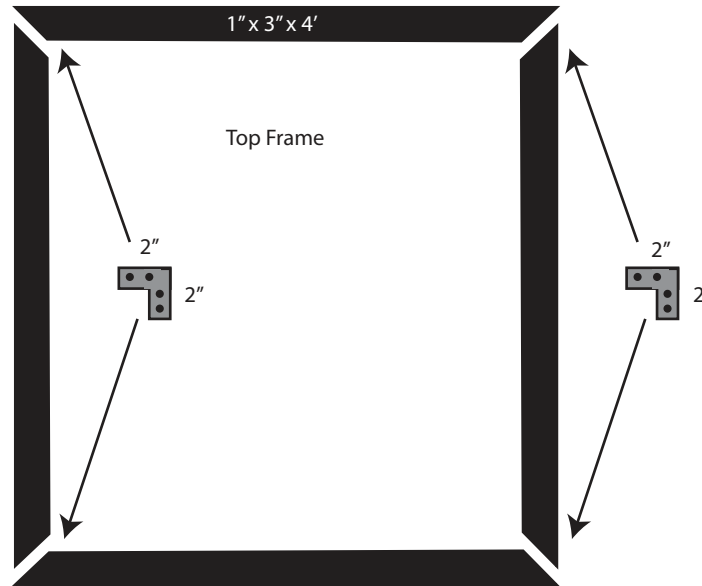


# NERF GUN WALL BY DIONNE @HOMEMADEOURWAY.COM

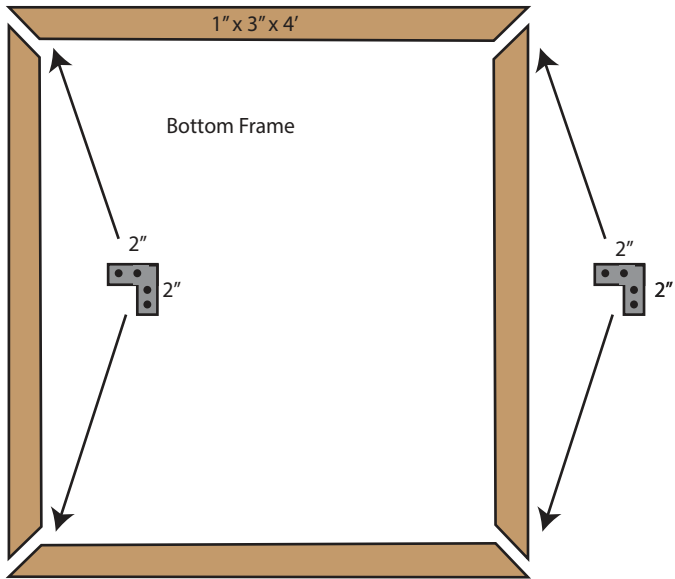

1. Miter the corners of all 8 boards at a 45-degree angle.
2. Attach two boards at the corner with metal brackets.
3. Repeat above steps for the rest of the boards making two frames.

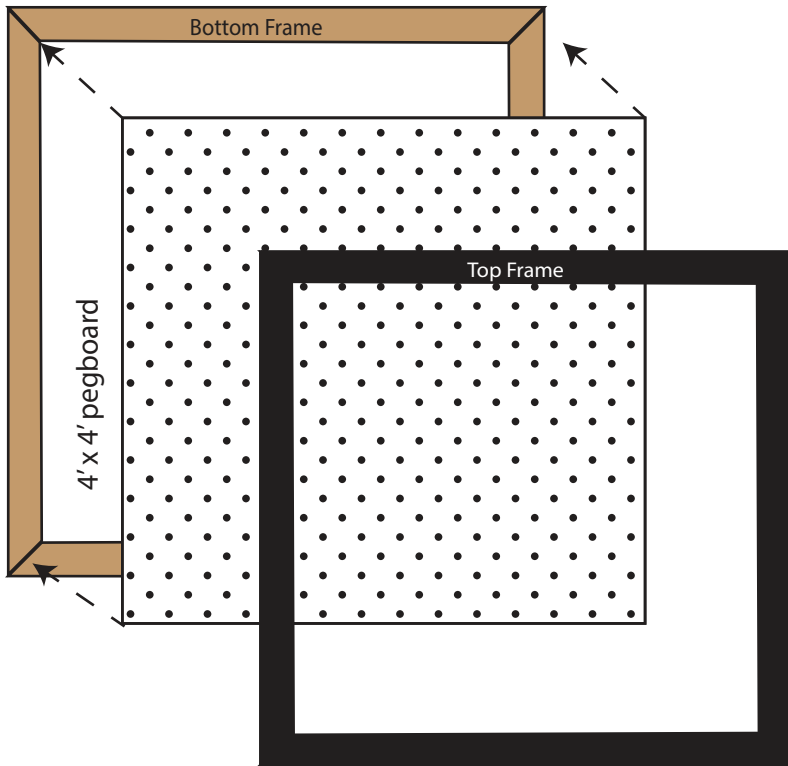

4. Paint the pegboard white on one side.
5. Paint the whole front frame black.
6. Wrap the outside edge of the unpainted (bottom) frame with caution tape.
7. Lay the above frame on a flat surface.
8. Place the pegboard (painted side up) on top of the unpainted frame.
9. Make sure edges line up then attach pegboard to the frame using 3/4" wood screws (space these out so that you use 6 screws per side).
10. Mark out the stud locations on your wall.
11. Mark the location of the studs onto the pegboard frame and pre-drill holes for drywall screws.
12. With assistance, hold the pegboard frame to your desired location on the wall.
13. Using a level, make sure it is straight. Then attach frame to the wall using 2 1/2" drywall screws (2 per stud: top and bottom of frame)
14. Lay the caution tape on the face of the painted frame.
15. Line up the painted frame to the pegboard frame and attach with finishing nails. (nail only through the black portions of the caution tape.) [3 nails per side].
16. Using a black sharpie, color in heads of finishing nails.